

II. SAFETY


INCLEMENT WEATHER PRECAUTIONS

Exposure of your scooter to inclement weather conditions should be avoided whenever possible. If suddenly caught up in rain, snow, severe cold or heat while operating your scooter, proceed to shelter at the



V. OPERATION



0







FUSE REPLACEMENT

In the event a fuse should cease to work:

1. Remove the fuse by pulli



APPENDIX I - SPECIFICATIONS

 


Figure 26. Dimensions

